
 
 























# Lights Plus Quick User Guide

Full ("Away") Arming	
 <ul style="list-style-type: none"> <li>❖ Quick mode: </li> <li>❖ High Security mode: Code &gt; </li> </ul>	 <ul style="list-style-type: none"> <li>❖ Quick mode: </li> <li>❖ High security mode:  <ul style="list-style-type: none"> <li>&gt; code or use Proximity tag</li> </ul> </li> </ul>
 <ul style="list-style-type: none"> <li>❖ Quick mode: </li> <li>❖ High Security mode: Code &gt; </li> </ul>	 <ul style="list-style-type: none"> <li> to apply to all partitions, or slide a specific partition to the right under .</li> </ul>
 <ul style="list-style-type: none"> <li>❖ Quick mode:  .</li> <li>❖ High security mode: Code &gt; </li> </ul>	 <ul style="list-style-type: none"> <li>Press </li> </ul>
 <ul style="list-style-type: none"> <li>Full Arm all: Security &gt; </li> </ul>	 <ul style="list-style-type: none"> <li>Press </li> </ul>
 <ul style="list-style-type: none"> <li>❖ Quick mode: </li> <li>❖ High Security mode:  &gt; code</li> </ul>	

## Partial ("Stay") Arming





❖ Quick mode:



❖ High Security mode: Code ➤



❖ Quick mode:  .



❖ High security mode:    
 ➤ code or use Proximity tag



❖ Quick mode:  .


❖ High Security mode: Code ➤



 to apply to all partitions, or slide a specific partition to the left under .



❖ Quick mode:  .

❖ High security mode: Code ➤ .




Press .





Partial Arm all: Security ➤ press .



Press  or large rounded button (installer-defined)



❖ Quick mode:  .

❖ High Security mode:  ➤ code

## Partition & Group Arming

❖ **Full partition arming:**

Code > "Security" menu > "Partitions" tab > select **All** or specific partition

number/s >



❖ **Partial partition arming:**

Code > "Security" menu > "Partitions" tab > select **All** or specific partition

number/s >



**Group Arming:** "Groups" tab > press group letter

❖ **Full partition arming:**

Code >  > select **All** or specific partition number/s > 



❖ **Partial partition arming:**

Code >  > select **All** or specific partition number/s > 

**Group Arming:** Press group letter

❖ **Full partition arming:**

Code >  > select **All** or specific partition number/s > 




❖ **Partial partition arming:**


Code >  > select **All** or specific partition number/s > 

**Group Arming:** Press group letter

**Note:** Supports up to 3 partitions. Does not support Group arming.


❖ **Full partition arming:**

• **Quick mode:** Partition number > 

• **High Security mode:** Partition number >  > code or use Proximity tag



❖ **Partial partition arming:**

• **Quick mode:** Partition number > 

• **High Security mode:** Partition number >  > code or use Proximity tag

## System Disarming



Code > "Security" menu >



> code or use Proximity tag



Code >



to disarm all partitions, or slide a specific partition to the center under > enter code



Code >



Press



Disarm all: Security > > code > press Disarm



Disarm all: Press



❖ Quick mode:

❖ High security mode: > code

## Partition & Group Disarming



Code > "Security" menu > "Partitions" tab > select the Partitions to Disarm >



Partition disarming: Code > > select All or specific partition number(s)  
Group disarming:



Partition disarming: Partition number > > code



Partition disarming: Code > > select All or specific partition number(s)


Group disarming:

## Duress Disarming



Duress code ➤   
**Note:** Panel is silent (no alarm siren)



 ➤ duress code  
**Note:** Panel is silent (no alarm siren)




Duress code ➤   
**Note:** Panel is silent (no alarm siren)

## Bypassing & Un-bypassing Zones









Code ➤ “Security” menu ➤ “Detectors” tab ➤ select a detector (zone) ➤ slide switch to the right to bypass




 ➤ code ✓ ➤ scroll to Activities menu ✓ ➤ Bypass ✓ ➤ Zones ✓ ➤ scroll to select a bypass option ✓.



 ➤ code  ➤ scroll to Activities menu  ➤ Bypass  ➤ Zones  ➤ scroll to select a bypass option 

## Viewing System Troubles







Code ➤ from the Top Bar, press  to view troubles



 ➤ code ✓ ➤ scroll to View menu ✓ ➤ Trouble ✓ ➤ scroll to view troubles



 ➤ code  ➤ scroll to View menu  ➤ Trouble  ➤ scroll to view troubles

## Viewing Last Alarm / Event Log



Code ➤ “History” menu ➤ press “All” to view all events, or search an event

**Note:** You can filter the search according to specific types of events:  
All / Alarms / Troubles / Smart Home / Media Events



📄 ➤ code ✓ ➤ scroll to Event Log ✓ ➤ scroll to view events



⚙️ ➤ code  ➤ scroll to Event Log  ➤ scroll to view events


## Viewing System Status



**i** for 2 seconds



❖ **Quick mode:**  for 2 seconds

❖ **High Security mode:**  
 for 2 seconds ➤  
code or use  
Proximity tag

 



Press  



Press 



❖ **Quick mode:**  for 2 seconds

❖ **High Security mode:**  for 2 seconds ➤ code

## Activating Output



Code > "Security" menu > "Utility Output" tab > select relevant Utility Output button, ✓



↶ > code ✓ > scroll to Activities menu, ✓ > scroll to Utility Output menu > enter Utility Output number ✓. **Note:** Must be installer-defined



❖ **Quick mode:** Press button (1–3) for 2 seconds  
 ❖ **High security mode:** Press button (1–3) for 2 seconds > code or use Proximity tag. **Note:** Must be installer-defined



⚙️ ↶ > code > scroll to Activities menu, > scroll to Utility Output menu > enter Utility Output number . **Note:** Must be installer-defined



❖ **Quick mode:** Press button (1–3) for 2 seconds  
 ❖ **High security mode:** Press button (1–3) for 2 seconds > enter code. **Note:** Must be installer-defined

## Activating a Panic Alarm



Press the Emergency button (located at the top of the Lock Screen or at the end of the main menu) > > press and together for 2 seconds.



Press and together for at least 2 seconds



Press and together for 2 seconds



Press and together for at least 2 seconds



 
 
 
 
Press and simultaneously



Press and together for 2 seconds.

## Activating a Fire Alarm



Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) >  > press  and  together for 2 seconds.



Press **4** and **5** together for at least 2 seconds.







Press **3** + **4** together for 2 seconds



Press **4** and **6** together for at least 2 seconds

## Activating an Auxiliary Emergency Alarm



Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) >  > press  and  together for 2 seconds.



Press **7** and **8** together for at least 2 seconds.









Press **5** + **6** together for 2 seconds



Press **7** and **9** together for at least 2 seconds.






SMS Commands		
<p><b>NOTES:</b> Command words are not case sensitive. A separator between command words may be used (or not). To receive an acknowledgement reply, add <b>RP</b> to the end of an SMS command.</p>		
<b>Full Arm:</b> code + A (Example: 1234A)	<b>Get system status:</b> code + ST	
<b>Home Arm:</b> code + H	<b>Bypass Zone:</b> code + B + zone number	
<b>Group Arm:</b> code + G + select group A--D	<b>Un-bypass Zone:</b> code + UB + zone number	
<b>Full Disarm:</b> code + D	<b>View last alarm :</b> code + AL	
<b>Partition Full Arm:</b> code + A: + partition number	<b>Change FM number:</b> code + FMPHONE + FM serial number + NEW + new phone number	
<b>Partition Home Arm:</b> code + H: + partition number		
<b>Multiple Partition Full/Home Arm:</b> code + A/ H: + partition number A, + partition number B, + partition number C, etc.	<b>Activate Output:</b> code + UOON + UO number	
<b>Partition Disarm:</b> code + D: + partition number	<b>Deactivate Output:</b> code + UOOFF + UO number	
<b>Multiple Partition Disarm:</b> code + D: + partition number A, + partition number B, + partition number C, etc.	<b>Get SIM credit level:</b> code + CR	
Icons – Elegant Keypad		
<p> <b>Power</b>  <b>On:</b> Power OK.  <b>Off:</b> No power  <b>Rapid flash:</b> System trouble.  <b>Slow flash:</b> System is programming</p>	<p> <b>Ready</b>  <b>On:</b> Ready to arm  <b>Off:</b> Not ready to arm  <b>Slow flash:</b> Ready to arm while entry/exit zone is open</p>	<p> <b>Arm</b>  <b>On:</b> System in fully armed mode  <b>Off:</b> System disarmed  <b>Rapid flash:</b> Alarm  <b>Slow flash:</b> System in Exit Delay</p>
<p> <b>Partial Arm / Bypass</b>  <b>On:</b> System in partially-armed or zone-bypassed mode  <b>Off:</b> No bypassed zones</p>	<p> <b>Tamper</b>  <b>On:</b> Tamper alarm  <b>Off:</b> No tamper alarm</p>	<p> <b>Fire</b>  <b>On:</b> Fire alarm  <b>Off:</b> No fire alarm  <b>Flash:</b> Fire circuit trouble</p>

## LED Indicators – 2-Way Remote Control










Operation	Send command*	Receive Status
Full Arm	Green	Red
Partial Arm	Green	Orange
Disarm	Green	Green
Alarm	Green	Flashing LED

\* If the LED changes to orange, it indicates a low battery condition.

## Defining User Codes – Elegant Keypad

1.  ➤ Grand master code (default = 1234) ✓
2.  to scroll to **Codes/Tags** ➤ press ✓ twice.
3.  to scroll to the user (index number) for defining ➤ press ✓ twice.
4. Enter (or re-enter) a 4–6 digit code ✓ ; the system beeps and ACCEPTED displays

## Defining User Codes – Panda Keypad

1.   ➤ Grand master code (default = 1234) ✓
1.   to scroll to **Codes/Tags** ➤ press  twice.
2.   to scroll to the user (index number) for defining ➤ press  twice.
3. Enter (or re-enter) a 4–6 digit code  ; the system beeps and ACCEPTED displays

## Registering to the RISCO Cloud

- 1 After the RISCO Cloud has been enabled by your system installer, go to **www.riscocloud.com**
- 2 Fill in your **first and last name**.
- 3 Enter your **e-mail address** as the Login Name (required for 1st-time activation).
- 4 Define **password** (minimum of 6 characters and at least one digit), and then confirm.
- 5 Enter the **15 digits Panel ID** as it appears as printed on the postcard packaged with the main panel. You can also view it on the keypad (see the LightSYS Plus User Manual).
- 6 Complete registration form, and then press **Register**.
- 7 Open the e-mail received at the email account you had defined as the Login Name in step 3, and then click the link to activate your registration to the Cloud.

## Logging in to the RISCO Cloud / Accessing the Web User Application

- 1 Go to **www.riscocloud.com**
- 2 Enter your **user name** and **password** (as defined during the registration process).
- 3 Enter the **system PIN code** (user code).
- 4 Click **Enter**.

## iRISCO Smartphone App

Download the iRISCO Smartphone app from the Apple App store or the Android Play Store.



For additional information see the LightSYS Plus User Manual, available on our website:  
[www.riscogroup.com](http://www.riscogroup.com)

© RISCO Group 2021. All rights reserved.