

Centre of 6.5mm DIA hole for plate furniture


Centre of 20mm DIA holes x2 for 570 CYL

Centre of 20mm DIA hole for turn Snibs

Centre of 22mm DIA hole for spindle

Centres of 6.5mm DIA holes for small rose furniture

Centre of 6.5mm DIA hole for plate furniture

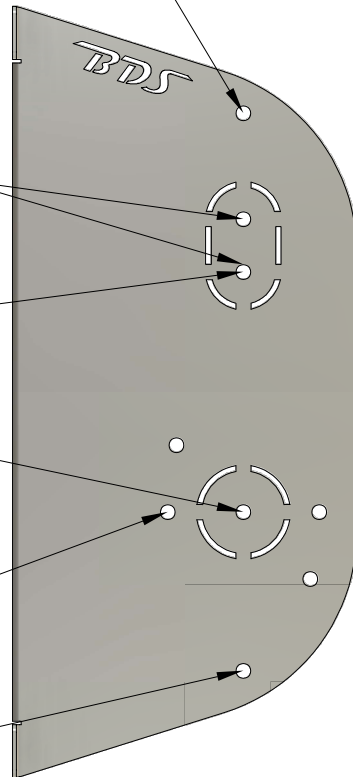

Top edge of face plate

Guide for 2.5mm DIA face plate pilot hole

Guide for mortice pocket


Guide for 20mm DIA hole for stitch drilling of lock body

Guide for mortice pocket

Guide for 2.5mm DIA face plate pilot hole

Guiding edge for marking both sides of the door. Line this up with the edge of the face plate.

Guide for latch center

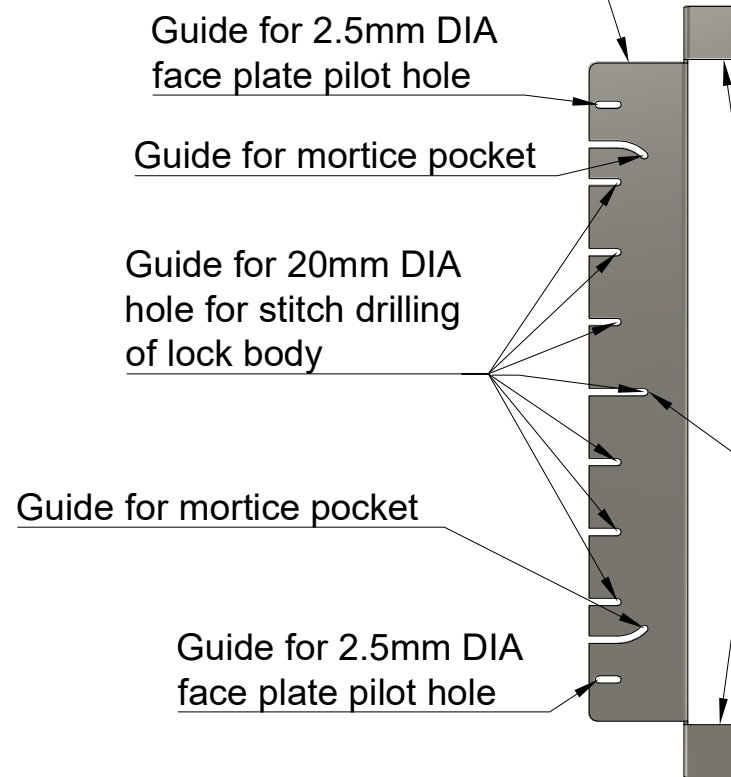

BDS mortice template 60mm backset

Product for trained individuals only.
Always follow the manufacturer's instructions for installation.
Always check measurements before starting.